


Chemcloth Polishing Cloth

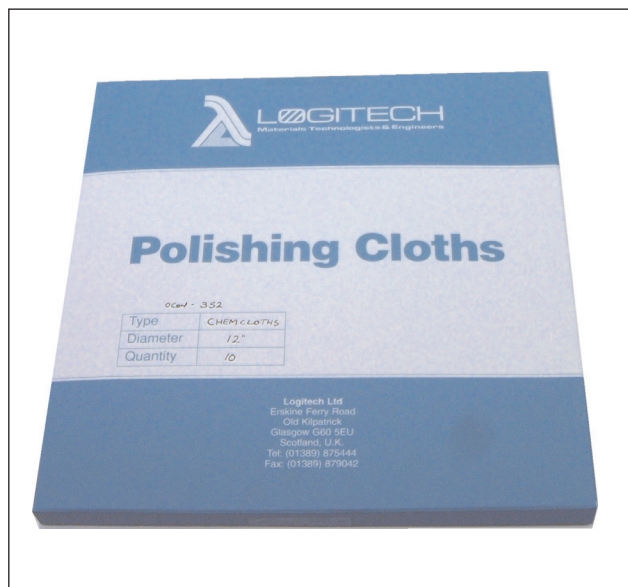

Product Data

8" / 200mm:	0CON-350
10" / 250mm:	0CON-351
12" / 300mm:	0CON-352
14" / 350mm:	0CON-353
18" / 450mm:	0CON-354
22" / 560mm:	0CON-355

Introduction:

Chemcloth Polishing Cloth is designed to satisfy the exacting requirements of chemo-mechanical polishing. The black napped urethane surface layer is intrinsic to the substrate giving superior nap strength and longer pad life.

Chemcloth Polishing Cloths are supplied with a protected self-adhesive backing and each cloth is hermetically sealed in a polythene sachet.

Chemcloth is ideally suited to a variety of polishing processes including:

- **Production polishing because of the cloth's superior wear resistance and subsequent long life.**
- **Finishing under corrosive acid and alkaline conditions because of their ability to produce perfect polishes in less time.**
- **High speed polishing operations because of their superior nap strength.**

Ordering Data:

Code	Diameter	Pack size	Comments
0CON-350	8" / 200mm	10	<p>Suitable for final polishing of delicate semiconductor materials, such as Gallium Arsenide, with Chemlox Polishing Fluid.</p> <p>A poromeric pad with vertically orientated pore structure, chemcloth is designed for instantaneous recovery of the pad from polishing pressure, thereby producing the optimum surface finish quality.</p> <p>All Logitech polishing cloths are supplied in self adhesive backed form.</p>
0CON-351	10" / 250mm	10	
0CON-352	12" / 300mm	10	
0CON-353	14" / 350mm	10	
0CON-354	18" / 450mm	10	
0CON-355	22" / 560mm	10	

Chemcloth Polishing Cloth



Certificate No. FM 12025



Logitech Limited
Erskine Ferry Road, Old Kilpatrick, Glasgow G60 5EU, Scotland, U.K.
Tel: +44 (0) 1389 875444
Fax: +44 (0) 1389 890956
e-mail: info@logitech.uk.com
www.logitech.uk.com

Distributed by: